

MODEL R182 AND TR182 SERVICE MANUAL

TABLE OF CONTENTS

SECTION	PAGE NO. AEROFICHE/MANUAL
1. GENERAL DESCRIPTION	1A9/1-1
2. GROUND HANDLING, SERVICING, CLEANING, LUBRICATION AND INSPECTION	1B9/2-1
3. FUSELAGE	1F15/3-1
4. WINGS AND EMPENNAGE	1H17/4-1
5. LANDING GEAR, BRAKES AND HYDRAULIC SYSTEM	2A3/5-1
6. AILERON CONTROL SYSTEM	2F5/6-1
7. WING FLAP CONTROL SYSTEM	2F23/7-1
8. ELEVATOR CONTROL SYSTEM	2G17/8-1
9. ELEVATOR TRIM CONTROL SYSTEM	2H9/9-1
10. RUDDER CONTROL SYSTEM	2I13/10-1
11. NORMALLY-ASPIRATED ENGINE	2J9/11-1
11A. TURBOCHARGED ENGINE	3A3/11A-1
12. FUEL SYSTEM	3B17/12-1
13. PROPELLER AND GOVERNOR	3D21/13-1
14. UTILITY SYSTEMS	3E13/14-1
15. INSTRUMENTS AND INSTRUMENT SYSTEMS	3G11/15-1
16. ELECTRICAL SYSTEMS	3I9/16-1
17. STRUCTURAL REPAIR	4A3/17-1
18. PAINTING	4C17/19-1
19. WIRING DIAGRAMS	4D5/19-1

WARNING

When performing any inspection or maintenance that requires turning on the master switch, installing a battery, or pulling the propeller through by hand, treat the propeller as if the ignition switch were ON. Do not stand, nor allow anyone else to stand, within the arc of the propeller, since a loose or broken wire, or a component malfunction, could cause the propeller to rotate.