

## R/TR182 Main Landing Gear Actuator Bushing Inspection Guideline

- 1) Grease emitting from below brake swivel fitting was 1st indication of failing MLG actuator bushing.
- 2) Bushing flange projects from actuator cap when it should be flush.
- 3) Brake swivel fitting safety wire is holding the actuator bushing in position, and resisting bushing movement from projecting further out of the actuator cap

