

MODEL R182 AND TR182 SERVICE MANUAL

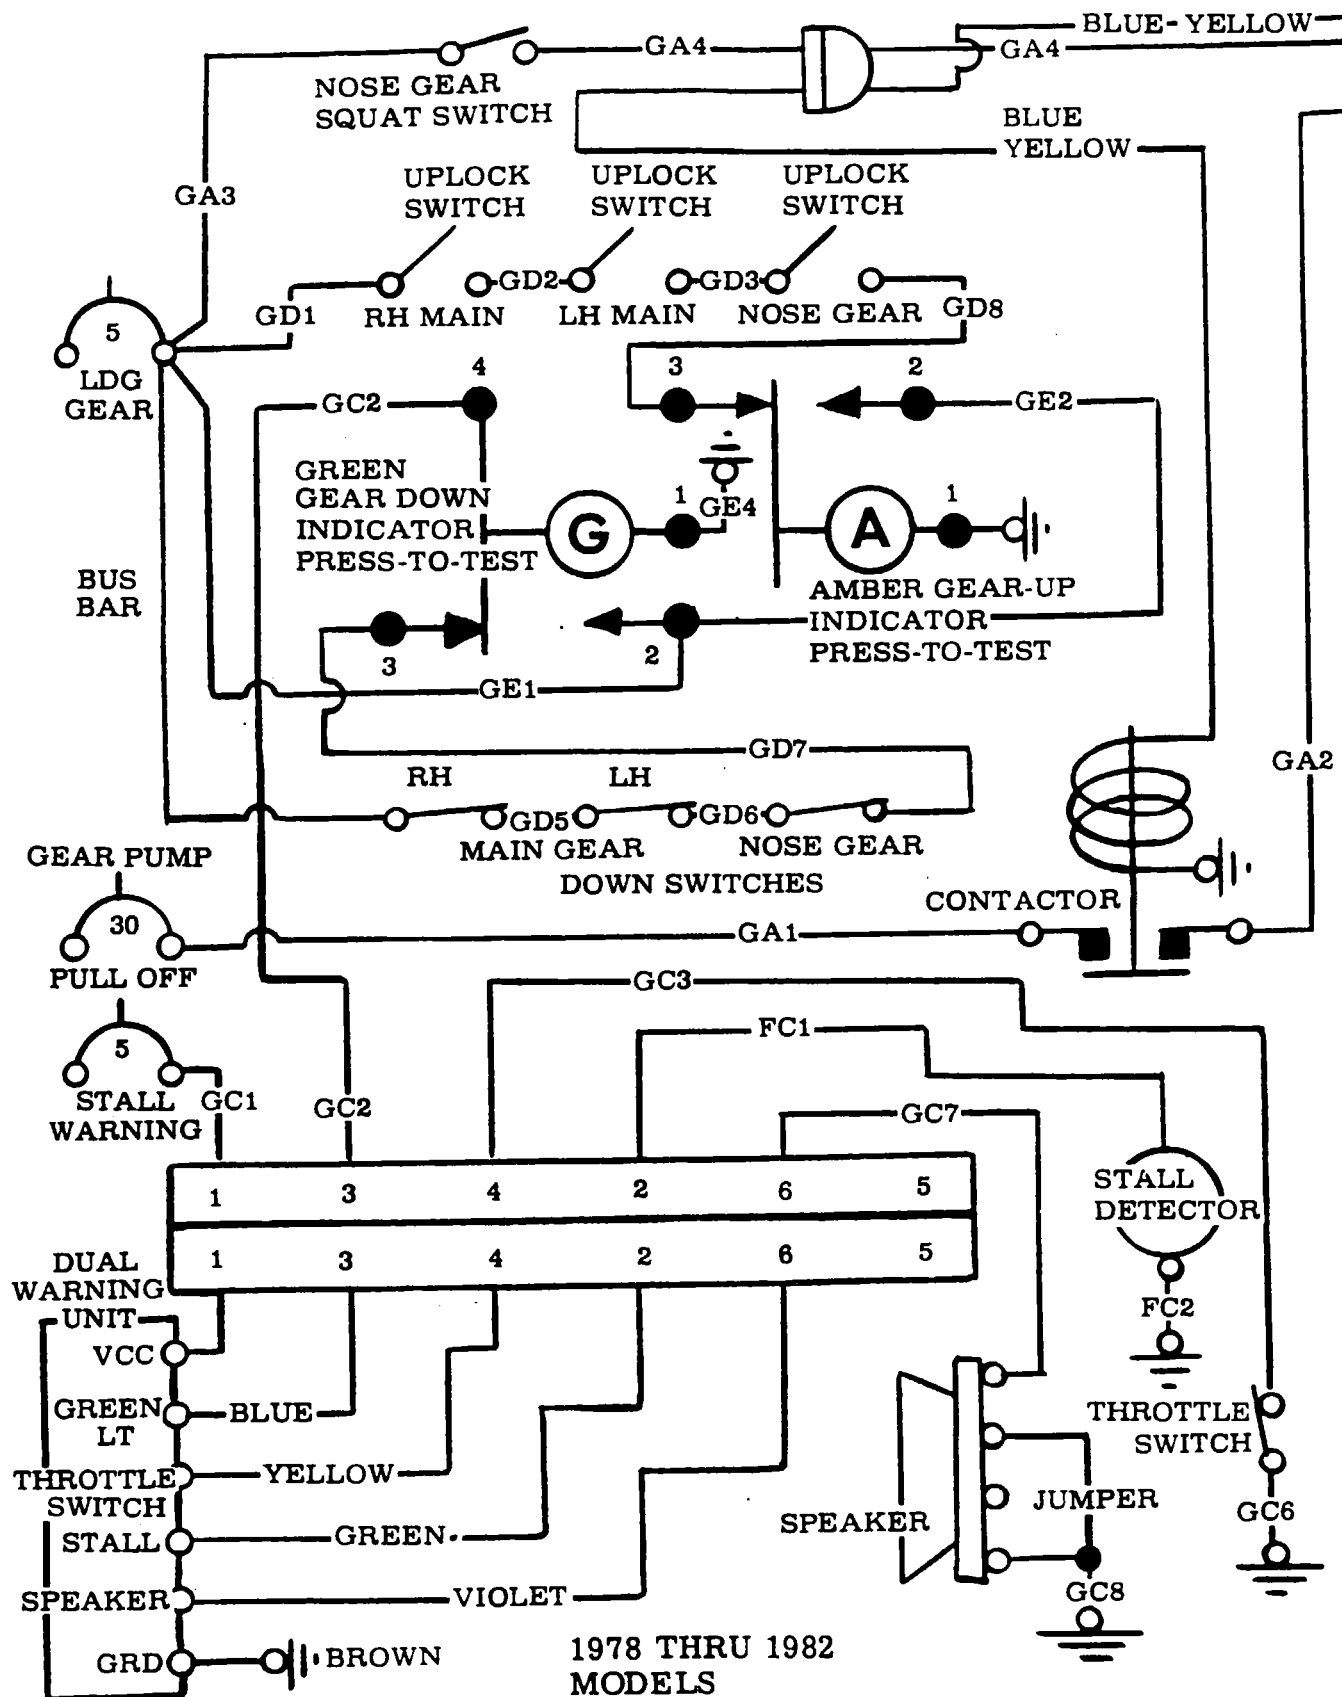


Figure 5-1. Landing Gear System Schematic (Sheet 1 of 3)

MODEL R182 AND TR182 SERVICE MANUAL

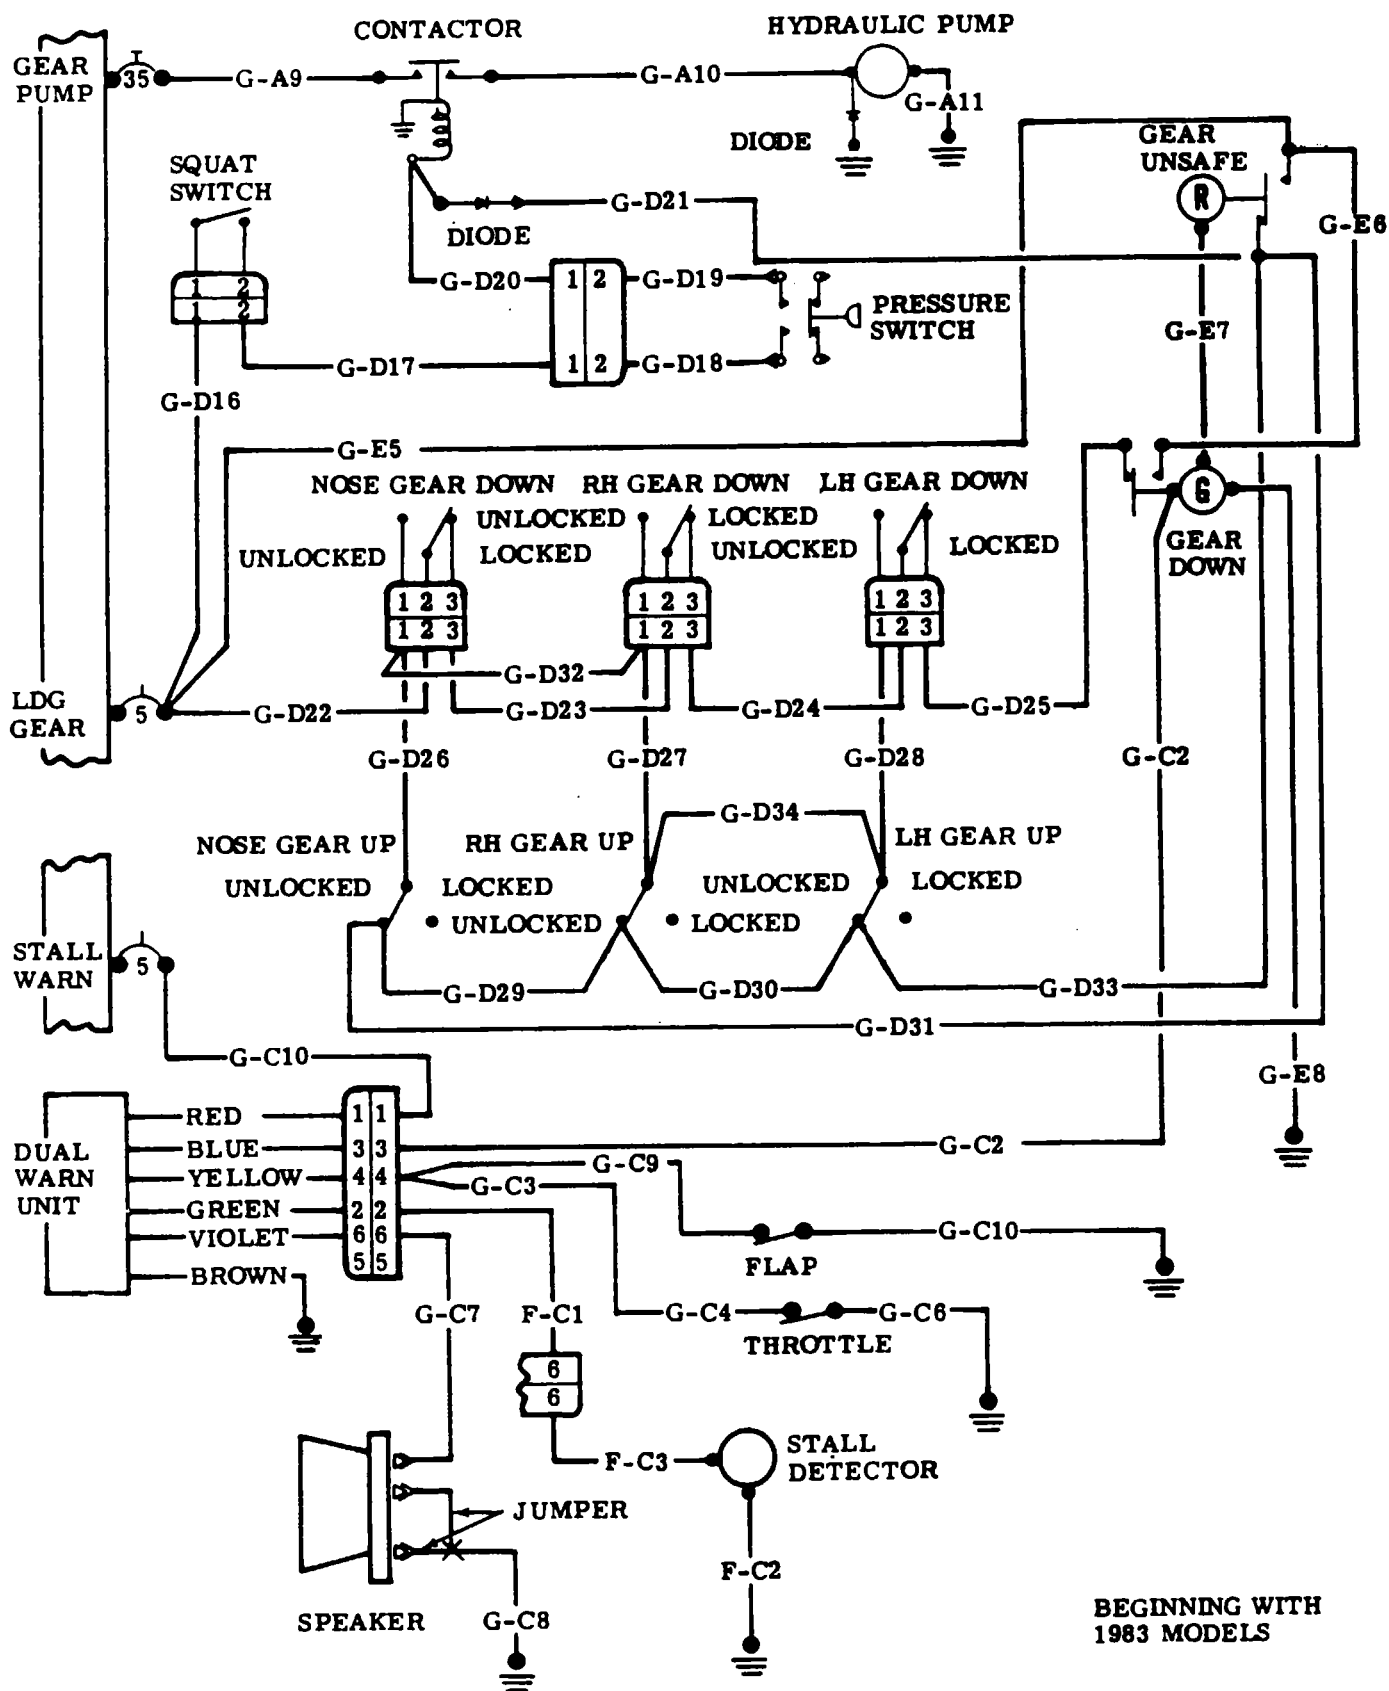


Figure 5-1. Landing Gear System Schematic (Sheet 2 of 3)